




# Installing New Cabinet Hardware


## Step 1. Location of Cabinet Hardware

While there are no hard, fast rules for placement of a knob or pull on a cabinet door, most cabinet makers will locate them approximately 3"-4" above the upper non-hinged corner on base cabinets, or the lower non-hinged corner on wall cabinets. However, the decision is yours to make!


### Wall Cabinets

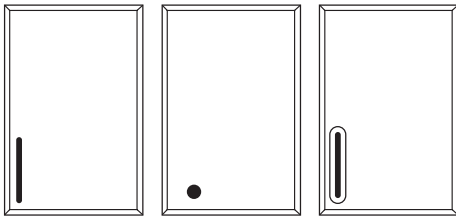

### Base Cabinets

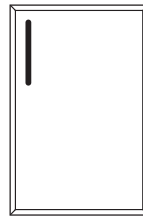

### Wall or Base Cabinets

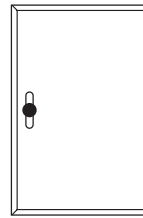


### Drawers



## Step 2. Mounting Cabinet Hardware

When drilling for a knob or pull, a 3/16" hole is recommended for most styles. The exception is pulls that have "studs". A stud is simply an extension of the molded screw holes. If a pull has a stud, a 1/4" hole is required with studs sitting securely in the wood.

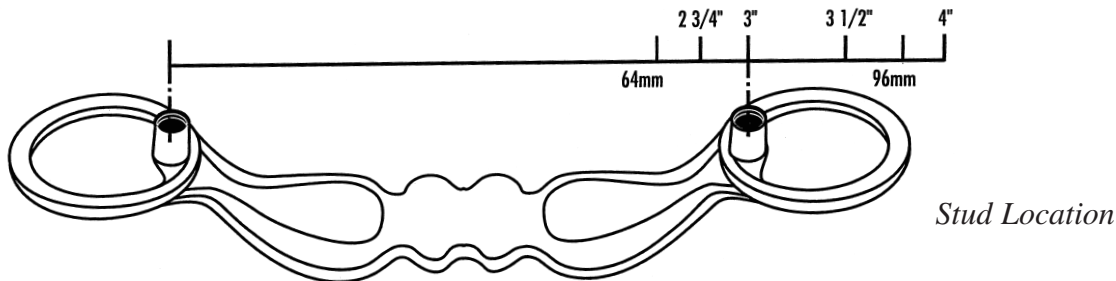

*Stud Location*

### **IMPORTANT Screw Information:**

Amerock® includes 8-32 x 1" long machine screws with most knobs and pulls because the typical cabinet door or drawer front is 3/4" thick. This screw length should work in most applications. However, if your cabinet doors or drawer fronts are thicker than 3/4" you will need to use longer screws for mounting. Check the thickness of both a cabinet door and a drawer front in your kitchen, as the thickness dimensions may not be the same. In general, the screw length(s) you use should be 1/4" longer than the thickness of your cabinet door or drawer front material. It is not uncommon for some drawers to be constructed with a 3/4" thick drawer front attached to a 3/4" thick drawer box. In this situation, the total drawer thickness is 1-1/2", making a 1-3/4" long screw necessary for mounting. These screws may be purchased from any hardware store. Please note that select hardware sold by Amerock® may include metric screws instead of machine screws.

**SEE NEXT PAGE**

# A. Mounting Pulls

## Sizes Available

Pulls can be obtained in U.S. Measurements as well as metric. Amerock® offers a broad range of sizes to choose from.




## How to Choose the Right Size

- Take note of all sizes available.
- FYI, 3" is the most common size pull.
- Size is determined by measuring from hole to hole, not by the length of the pull itself.

# Installation Tips

If you are using a pull, you will want to determine the hole center spacing of the pull. 3" hole centers are the most common, however, Amerock® offers a wide variety of sizes. You may want to create a durable template prior to drilling to mark the mounting holes and ensure that they are parallel with the door or drawer edge and they are the same placement height on every cabinet. **WARNING! An example is provided below, however, do not use this for drilling purposes as printers may provide template distortions.**

## Hole Center Measurements

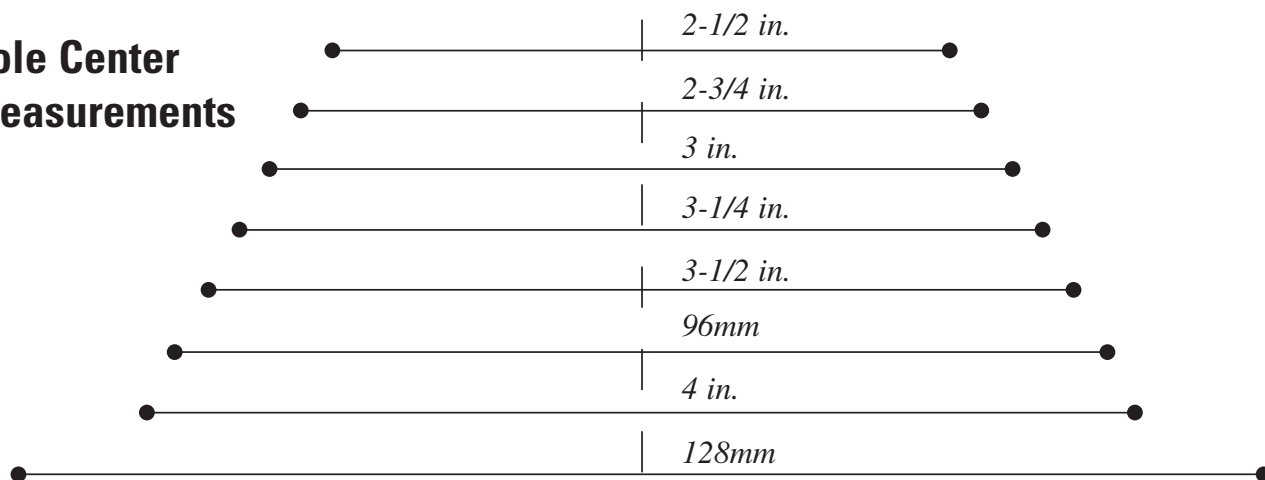

# B. Mounting Knobs



## Sizes Available

Knobs can be obtained in a variety of sizes, shapes, and diameters. Amerock® offers a broad range of sizes to choose from.

## How to Choose the Right Size

There are no right or wrong sizes when it comes to selecting the appropriate knob size. Choose the size that looks best in proportion to the size of your cabinet doors and drawers. FYI, a 1-1/4" or 1-3/8" diameter knob is the most popular.

To create a dramatic effect, consider using a large (1-1/2" diameter or greater) or small (1" diameter or smaller) sized knob. Small sized knobs also work well on applications such as apothecary drawers, spice drawers, appliance garages, pullout cutting boards, etc.

## Installation Tips

If you are installing a knob, it is suggested that you create a durable template prior to drilling to mark the mounting hole. This will help to ensure that the knob is positioned properly on the cabinet door or drawer front and that all are the same placement height on every cabinet.



# Replacing Cabinet Hardware

## A. Pulls

When replacing pulls, the choices are numerous. You may choose to go with a pull with the same hole centers as your existing pull. Pull size is determined by measuring from hole to hole, not by the length of the pull itself. However, if you do choose to use a pull which is longer or shorter, the following information will assist you:

- On wall cabinets, reuse the bottom hole and drill a new top hole
- On base cabinets, reuse the top hole and drill a new bottom hole
- On drawers, drill two new holes and realign in the center

## B. Knobs


When replacing knobs, simply unscrew your old knob. Leaving the old screw in place, screw on your new knob. Nothing could be easier!

## C. Backplates


If you are switching sizes of pulls, or from a knob to a pull, or from a pull to a knob, there may be one or more exposed holes in the cabinet surface. To remedy this situation, you may choose to use a backplate.

- Backplates are used in conjunction with a knob or a pull. It is placed between the cabinet door or drawer surface and the knob or pull. Backplates will also help to protect the wood surface, and may visually enhance the existing decorative hardware.


1) Switching from pull to knob:

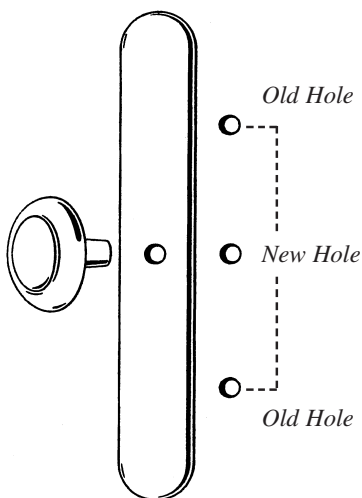

2) Switching from 96mm pull to 3" pull:

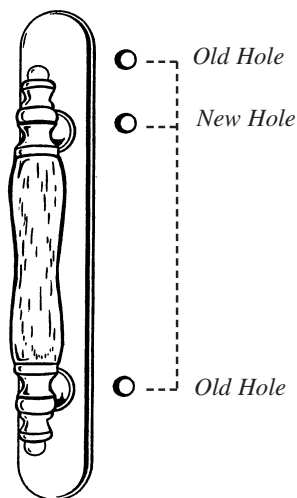

3) Switching from knob to pull:

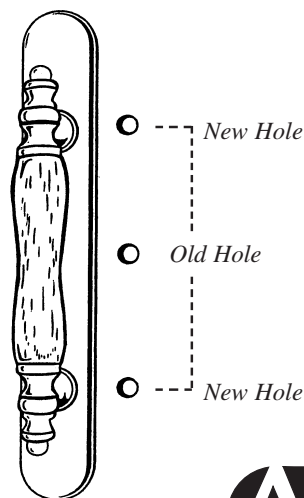

**Note:**

*If you are switching from a knob to a pull or from a pull to a knob, generally there will be one or more exposed holes in the cabinet surface! Backplate will cover the old mounting holes.*

